



laser printer

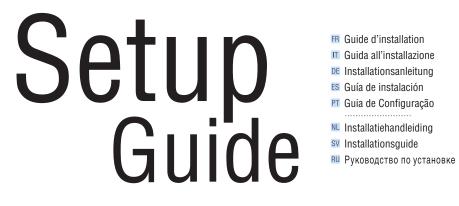


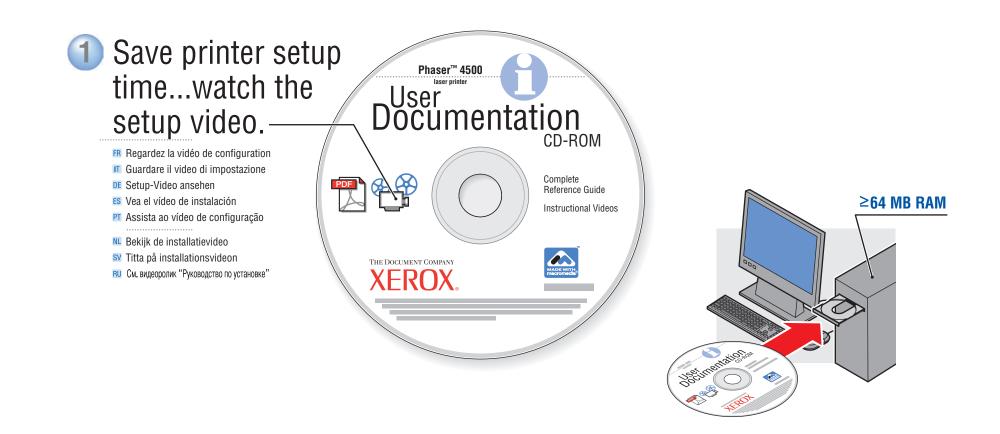


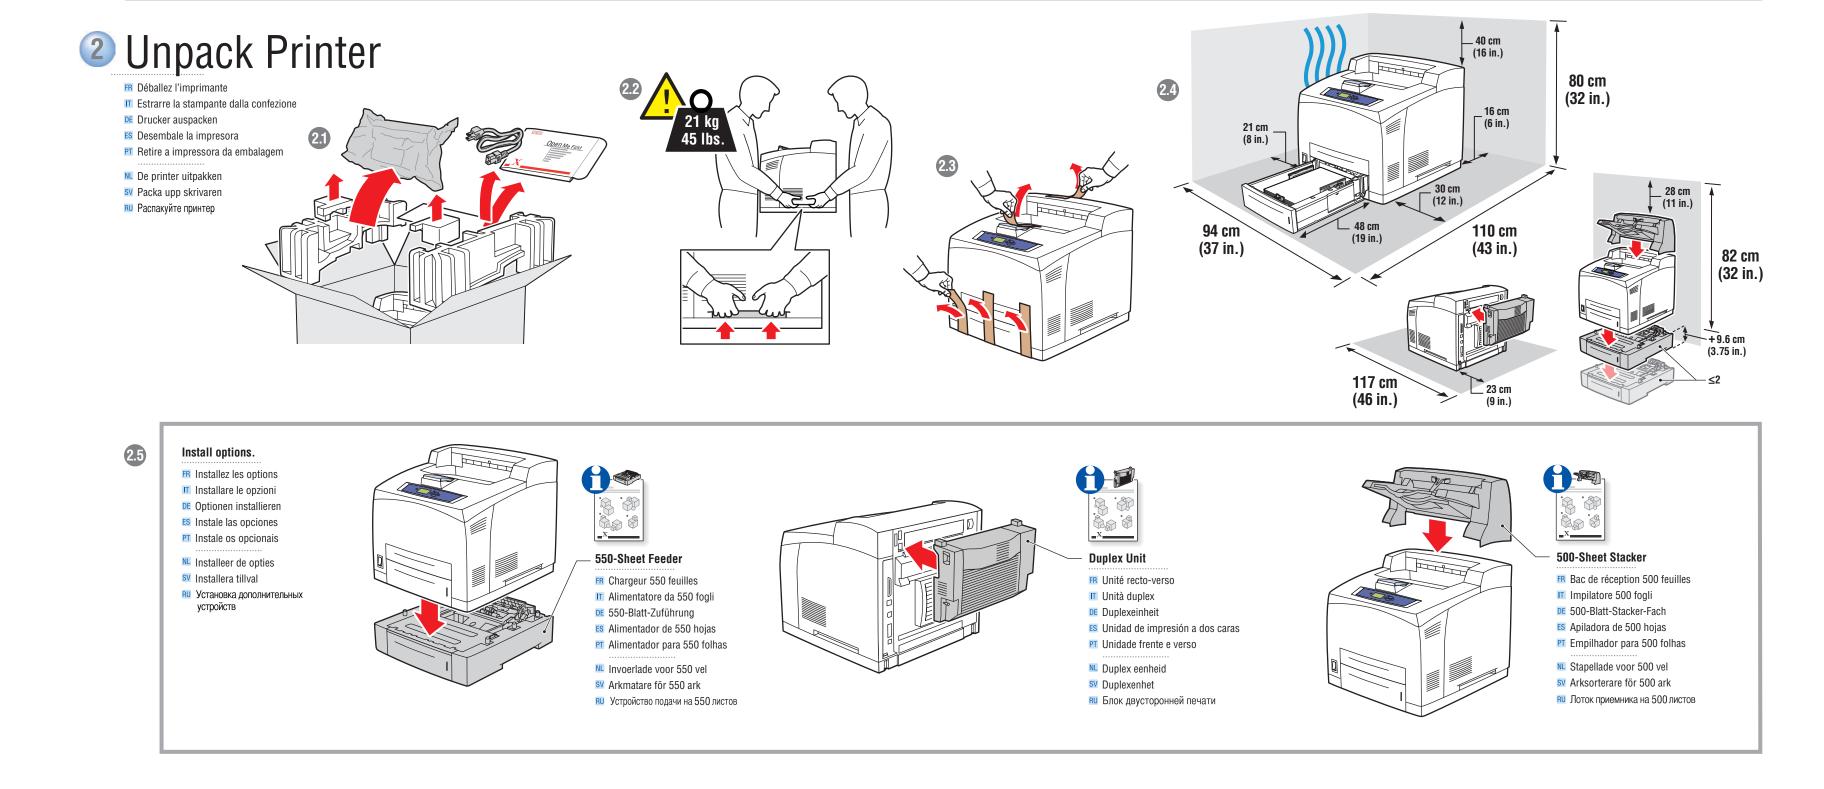

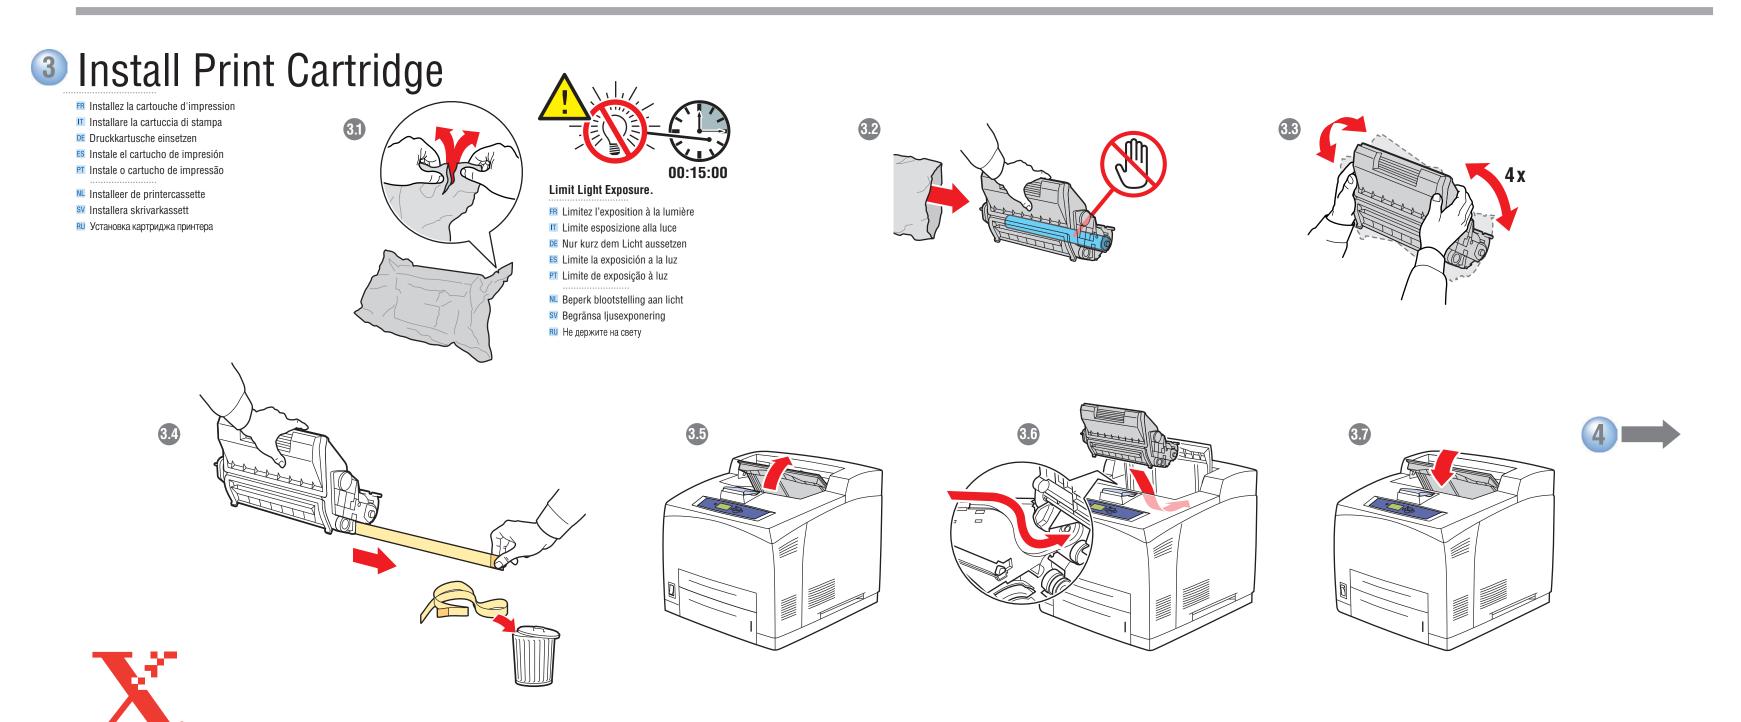




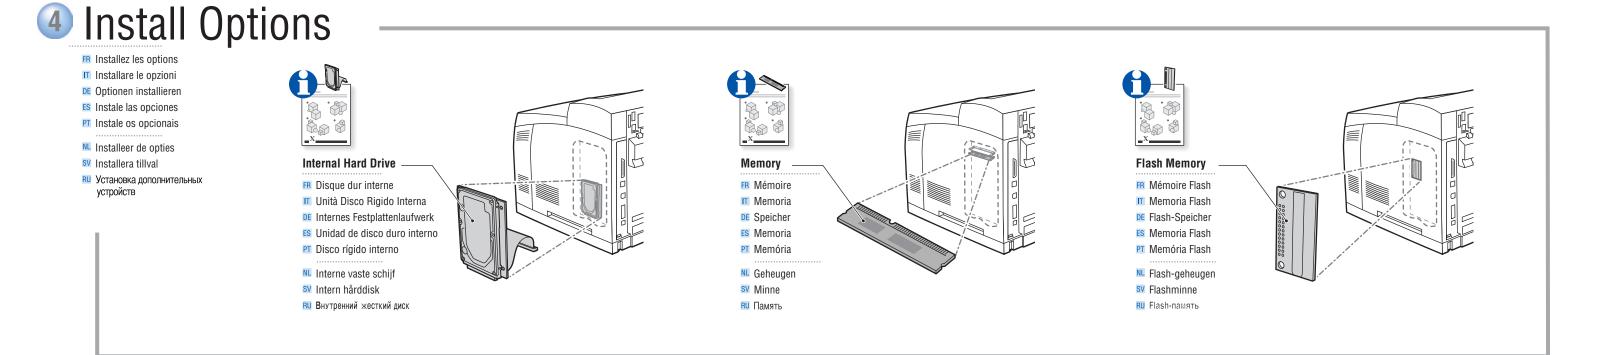

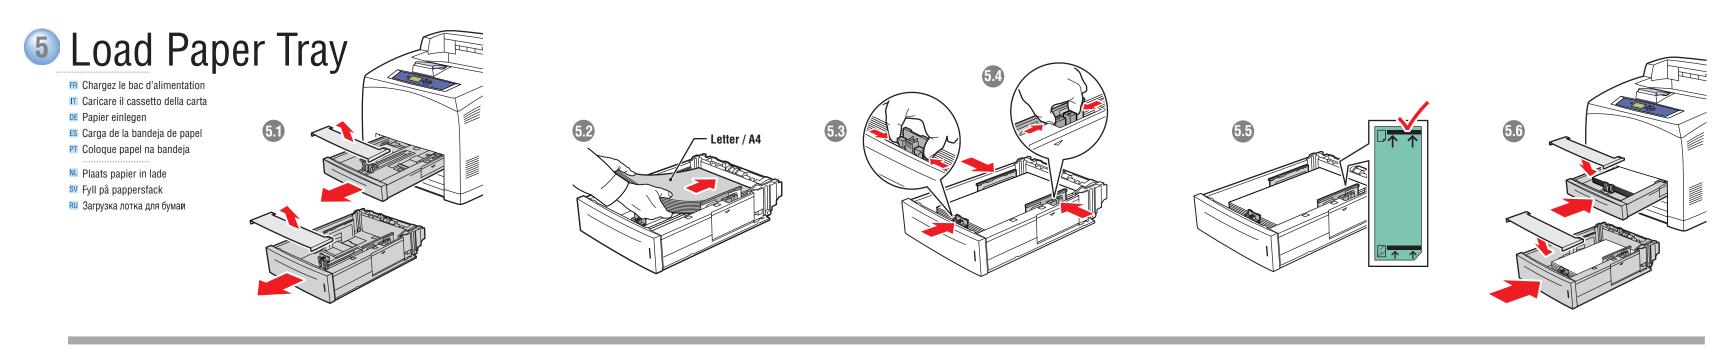



Choose Printer Connection

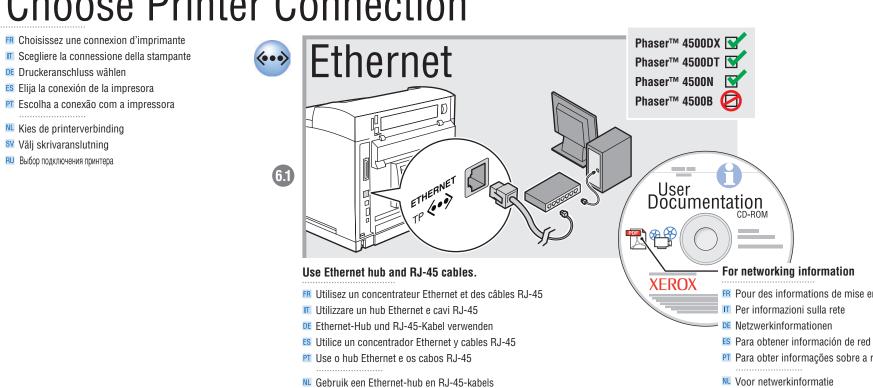

SV Använd Ethernet-hubb och RJ-45-sladdar


RU Используйте концентратор Ethernet и кабели RJ-45

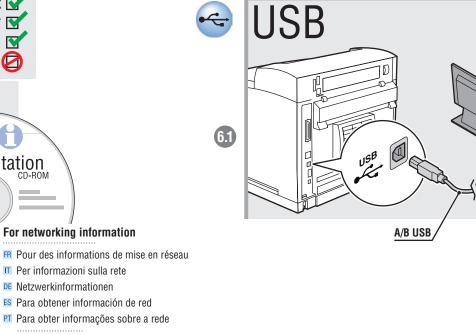


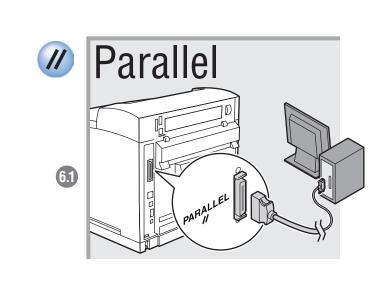




- An Netz anschließen ES Conecte la alimentación PI Lique na tomada
- **™** Schakel de stroom in SV Slå på ström
- **RU** Подключение питания

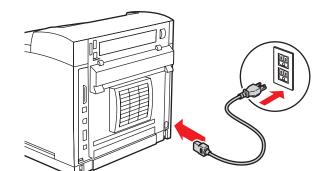



- Accendere la stampante Drucker einschalten
- ES Encendido de la impresora PI Ligue a impressora
- Zet de printer aan SV Sätt på skrivaren Включение принтера

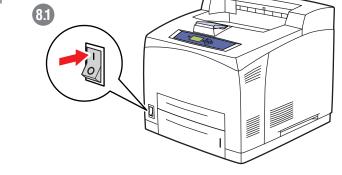

SV För nätverksinformation

в Сведения о сетевом подключении

